

" All recorders feature pictures, description and specifications - except for 10 which do NOT have a 'Price when new'

* Test reports are vintage reproductions and contain all of the original associated diagrams

* Manuals are user manuals except for Teac X-1000R and Sony TC 756 which are service manuals

* Year refers to the earliest sighted listing

	Make	Year	Model	Price	Circuit	Test report	Manual
1	Aiwa	1969	TP-1012		√		
2	Aiwa	1969	TP-719		√		
3	Akai	1971	1720		√		
4	Akai	1973	1721	√	√		
5	Akai	1972	1730D-SS	√			
6	Akai	1972	1800D-SS	√			
7	Akai	1969	1800-L	√			
8	Akai	1975	202DSS				
9	Akai	1971	250D				
10	Akai	1969	4000D	√	√		√
11	Akai	1975	4000DB	√			√
12	Akai	1972	4000DS	√			
13	Akai	1976	4000DS mk II	√			
14	Akai	1974	GX- 400D	√			
15	Akai	1974	GX-1820D	√		√	
16	Akai	1973	GX-1900 & 1900D	√		√	
17	Akai	1972	GX-210 D	√			
18	Akai	1977	GX-215D	√			
19	Akai	1973	GX-221-D	√			
20	Akai	1976	GX-230	√			
21	Akai	1979	GX-255	√	√		
22	Akai	1973	GX-260D	√			
23	Akai	1976	GX-265D	√			
24	Akai	1980	GX-266 II	√			
25	Akai	1979	GX-267D	√		√	
26	Akai	1976	GX-270D-SS	√			
27	Akai	1974	GX-280D-SS	√		√	
28	Akai	1970	GX-365 & 365D	√			
29	Akai	1972	GX-370D	√			
30	Akai	1975	GX-400 DSS	√		√	
31	Akai	1979	GX-4000D & 4000DB	√			
32	Akai	1974	GX-600, 600DB & 600 Pro	√		√	
33	Akai	1979	GX-620	√			
34	Akai	1980	GX-625	√			
35	Akai	1976	GX-630D, 630DB and 630-PRO	√			
36	Akai	1976	GX-630D-SS	√			
37	Akai	1979	GX-635D/DB & GX-636/DB	√			
38	Akai	1982	GX-646	√			√
39	Akai	1976	GX-650D	√			
40	Akai	1981	GX-747	√			
41	Akai	1982	GX-747dbx	√			
42	Akai	1982	GX-77	√			
43	Akai	1969	M-10	√			√
44	Akai	1979	Pro 1000	√		√	
45	Akai	1971	X-165D	√			
46	Akai	1968	X-1800 SD	√			
47	Akai	1972	X-1810 & 1810D	√			
48	Akai	1971	X-2000SD	√			
49	Akai	1971	X-200D	√	√		√
50	Akai	1968	X360/360D	√			
51	Akai	1970	X-5000 W & L	√			
52	Akai	1968	X-V	√			
53	Allied	1971	TD-1025	√			
54	Allied	1969	TD-1030	√			
55	Allied	1971	TD-1039	√			
56	Allied	1969	TD-1070	√			

	Make	Year	Model	Price	Circuit	Test report	Manual
57	Allied	1971	TD-1099	√			
58	Allied	1969	TR-1035	√			
59	Allied	1969	TR-1040	√			
60	Allied	1971	TR-1049	√			
61	Allied	1969	TR-1080	√			
62	Ampex	1969	750	√			
63	Ampex	1969	1450	√			
64	ASC	1983	AS-5000	√			
65	ASC	1983	AS-6000	√		√	
66	Bang & Olufsen	1969	Beocord 1200	√	√	√	
67	Bang & Olufsen	1969	Beocord 1600	√	√		
68	Bang & Olufsen	1969	Beocord 1800	√	√	√	
69	Bang & Olufsen	1970	Beocord 2400	√			
70	Bang & Olufsen	1971	Beocord 5000 Prototype				
71	Bell & Howell	1969	2295	√			
72	Braun	1970	TG-1000	√			
73	Brenell	1973	IC 2000	√			
74	Brenell	1978	Mini 8	√	√		
75	Brenell	1971	Mk 6	√		√	
76	Brenell	1976	Mk 7	√			
77	Brenell	1970	ST 200 & ST 400	√			
78	Chilton	1969	100S	√		√	√
79	Crown	1969	SX 800	√		√	
80	Denon	1980	DH-510	√		√	
81	Dokorder	1976	1120	√			
82	Dokorder	1976	1140	√		√	
83	Dokorder	1974	7100	√			
84	Dokorder	1974	7140	√		√	
85	Dokorder	1975	7200	√			
86	Dokorder	1974	7500	√			
87	Dokorder	1975	8140	√			
88	Dokorder	1975	9200	√			
89	Ferrograph	1974	Logic 7	√	√		
90	Ferrograph	1968	Series 7	√	√	√	√
91	Ferrograph	1976	Studio 8	√		√	
92	Ferrograph	1975	Super 7	√	√		
93	Geloso	1968	G651	√			
94	Grundig	1970	TK 146	√	√		
95	Grundig	1970	TK 147	√			
96	Grundig	1971	TK 148	√			
97	Grundig	1971	TK 244	√			
98	Grundig	1969	TK 247	√			
99	Grundig	1970	TK 248	√			√
100	Grundig	1971	TK 3200	√		√	
101	Grundig	1976	TK 545	√			
102	Grundig	1972	TK 600				
103	Grundig	1974	TK 745	√			
104	Grundig	1979	TK 850 Hi-Fi FM				
105	Grundig	1970	TK121 & TK 141	√			
106	Grundig	1976	TS 1000	√			
107	Grundig	1977	TS 925 & 945	√			
108	JVC	1972	1400 U	√			
109	JVC	1973	1405 U/F	√			
110	JVC	1973	RD-1695	√			
111	Knight	1969	KG 415	√			
112	Lafayette	1969	RK 825	√			
113	Lafayette	1968	RK 830	√			
114	Lafayette	1969	RK 835	√			
115	Lafayette	1969	RK 845	√			
116	Lafayette	1969	RK 960	√			

	Make	Year	Model	Price	Circuit	Test report	Manual
117	Leavers-Rich	1977	Proline 2000 TC	√			
118	Marantz	1978	7700	√			
119	Nagra	1971	4.2	√			
120	Nagra	1976	E			√	
121	Nagra	1976	IS	√		√	
122	Nagra	1968	Series 4	√			
123	Nagra	1970	SN series	√			
124	Nagra	late 1970's	T	√			
125	National/Panasonic	1968	RS 1000-S	√			
126	National/Panasonic	1968	RS 761-S	√			
127	National/Panasonic	1968	RS 766-US	√			
128	National/Panasonic	1972	RS-736-US			√	
129	National/Panasonic	1969	RS-760-S	√			
130	Otari	1975	MX-5050	√		√	
131	Philips	1968	EL3575	√			
132	Philips	1968	EL3578	√			
133	Philips	1972	N4307	√	√		√
134	Philips	1972	N4308	√	√		
135	Philips	1969	N4404	√			
136	Philips	1969	N4407	√	√		
137	Philips	1968	N4408	√	√		
138	Philips	1972	N4416	√			
139	Philips	1972	N4418	√			
140	Philips	1977	N4422 'Magno'				
141	Philips	1971	N4450	√			
142	Philips	1979	N4504	√			
143	Philips	1977	N4506	√			
144	Philips	1972	N4510	√			
145	Philips	1978	N4520	√		√	
146	Philips	1968	Pro 12	√		√	
147	Pioneer	1973	QT 6600	√			
148	Pioneer	1974	RT 1011	√			
149	Pioneer	1973	RT 1020	√		√	
150	Pioneer	1974	RT 1050	√			
151	Pioneer	1976	RT 2022 & 2024	√		√	
152	Pioneer	1977	RT 701 & RT 707	√		√	
153	Pioneer	1979	RT- 901 & RT 909	√			
154	Pioneer	1971	T 6600	√			
155	Pioneer	1971	T 8800	√			
156	Pye	1970	9123	√	√		
157	Pye	1970	9137	√			
158	Revox	1974	A700	√		√	
159	Revox	1972	A77 mk III	√	√	√	
160	Revox	1978	B77	√	√	√	√
161	Revox	1982	PR99	√			
162	Roberts	1969	450	√			
163	Roberts	1969	1719 & 1720	√			
164	Roberts	1969	1725-8L	√			
165	Roberts	1968	778X	√			
166	Roberts	1970	800X	√			
167	Saba	1972	544 G Hi-Fi	√			
168	Saba	1969	600 SH	√			
169	Sansui	1974	QD-5500S	√			
170	Sansui	1972	SD-5000	√			
171	Sansui	1974	SD-5050S	√			
172	Sansui	1970	SD-7000	√			
173	Sanyo	1968	MR-910	√			
174	Sanyo	1969	MR-929	√			
175	Sanyo	1968	MR-939	√			
176	Sony	1968	TC-104A	√			

	Make	Year	Model	Price	Circuit	Test report	Manual
177	Sony	1968	TC-222A	√			
178	Sony	1968	TC-255	√			
179	Sony	1972	TC-270	√	√		
180	Sony	1977	TC-277-4	√			
181	Sony	1974	TC-280	√			
182	Sony	1972	TC-330	√			
183	Sony	1968	TC-355	√	√	√	
184	Sony	1971	TC-366	√	√	√	
185	Sony	1971	TC-366-4	√		√	
186	Sony	1973	TC-377	√	√		
187	Sony	1974	TC-388-4	√			
188	Sony	1978	TC-399	√	√		
189	Sony	1971	TC-440	√			
190	Sony	1974	TC-458	√			
191	Sony	1979	TC-510-2	√			
192	Sony	1969	TC-540	√			
193	Sony	1974	TC-558	√			
194	Sony	1968	TC-560	√			
195	Sony	1969	TC-560D	√			
196	Sony	1971	TC-580	√			
197	Sony	1969	TC-630 & TC 630D	√	√	√	√
198	Sony	1972	TC-640	√			
199	Sony	1977	TC-645	√	√		
200	Sony	1972	TC-651	√			
201	Sony	1969	TC-666D	√			
202	Sony	1973	TC-755	√	√	√	
203	Sony	1974	TC-756 & TC-756-2	√	√		√
204	Sony	1976	TC-758	√			
205	Sony	1978	TC-765	√			
206	Sony	1978	TC-766-2	√		√	
207	Sony	1969	TC-770	√		√	
208	Sony	1969	TC-780	√			
209	Sony	1977	TC-788-4 Quadradial	√			
210	Sony	1971	TC-800B	√			
211	Sony	1972	TC-850	√		√	
212	Sony	1974	TC-880-2	√		√	
213	Stella	1969	SP 7	√		√	
214	Stella	1983	SP 9				
215	Studer	1973	B67	√			
216	Tandberg	1970	1700	√			√
217	Tandberg	1971	1800	√			
218	Tandberg	1972	2000	√			√
219	Tandberg	1976	10X & 10XD	√			
220	Tandberg	1970	3000X	√	√	√	√
221	Tandberg	1973	3300X	√			
222	Tandberg	1973	3400X	√			√
223	Tandberg	1975	3500X	√			
224	Tandberg	1974	3600X	√		√	
225	Tandberg	1971	4000X	√			√
226	Tandberg	1970	6000X	√	√		√
227	Tandberg	1972	9000X	√			√
228	Tandberg	1974	9200XD	√		√	
229	Tandberg	1968	Series 11	√	√	√	
230	Tandberg	1978	T20A / 20A-SE	√	√	√	
231	Tascam	1983	32	√			√
232	Teac	1980	X10, X10-R & X10-M	√			
233	Teac	1972	A 1030	√		√	
234	Teac	1970	A 1230	√		√	
235	Teac	1971	A 1250	√		√	
236	Teac	1972	A 1340	√			

	Make	Year	Model	Price	Circuit	Test report	Manual
237	Teac	1972	A 2300S	√			
238	Teac	1978	A 2340SX	√			
239	Teac	1972	A 3300, A 3300S & A 3300S-2T	√			
240	Teac	1972	A 3340	√	√		
241	Teac	1974	A 3340S	√			
242	Teac	1979	A 3440	√			
243	Teac	1968	A 4010S	√			
244	Teac	1972	A 4070G	√		√	
245	Teac	1974	A 4300	√			
246	Teac	1975	A 4300SX	√			
247	Teac	1974	A 5300	√			
248	Teac	1973	A 5500	√	√		
249	Teac	1968	A 6010	√			
250	Teac	1976	A 6300	√			
251	Teac	1978	A 6600	√			
252	Teac	1973	A 7010GSL & 7030GSL	√	√	√	
253	Teac	1979	X-10/X-10R	√			√
254	Teac	1982	X1000 (R/dbx)	√			
255	Teac	1984	X-2000R	√			
256	Teac	1981	X20R	√		√	
257	Teac	1980	X-3 & X-3R			√	
258	Teac	1983	X-300 & X-300R	√			
259	Teac	1979	X-7/X-7R	√		√	√
260	Teac	1983	X-700R	√			
261	Technics	1974	RS 1030 US	√			
262	Technics	1977	RS 1500	√		√	
263	Telefunken	1976	M 15A	√		√	
264	Telefunken	1970	M 205 & M 207	√			
265	Telefunken	1968	M 250	√			
266	Telefunken	1970	M 28 A, B and C	√		√	
267	Telefunken	1975	M 3000 / 3002 Hi-Fi	√			
268	Telefunken	1974	M 36	√			
269	Uher	1972	1200 Report Synchro	√			
270	Uher	1980	4200 & 4400 Report Monitor	√			
271	Uher	2000	6000 Report Universal				
272	Uher	1968	Royal De Luxe	√			
273	Uher	1976	SG 510	√			
274	Uher	1976	SG 560 'Royal'	√	√		
275	Uher	1977	SG 630 'Logic'	√			
276	Uher	1973	Uher 4000/4200/4400 Report IC	√			
277	Uher	1974	Varicord 263 stereo	√			